


Installation Instructions

3015371

Replacement Kit for 3006587

NOTE

- 1.** Run black wire under truck's frame towards rear bumper. DO NOT run wire close to exhaust. DO NOT drill into fuel lines, harnesses!
- 2.** Disconnect socket assembly #0203200 black wire from trucks frame.
- 3.** Strip black wires ends (#0203200, #3015373) and connect them together using butt terminal, soldering or other suitable method. Insulate connection water tight.

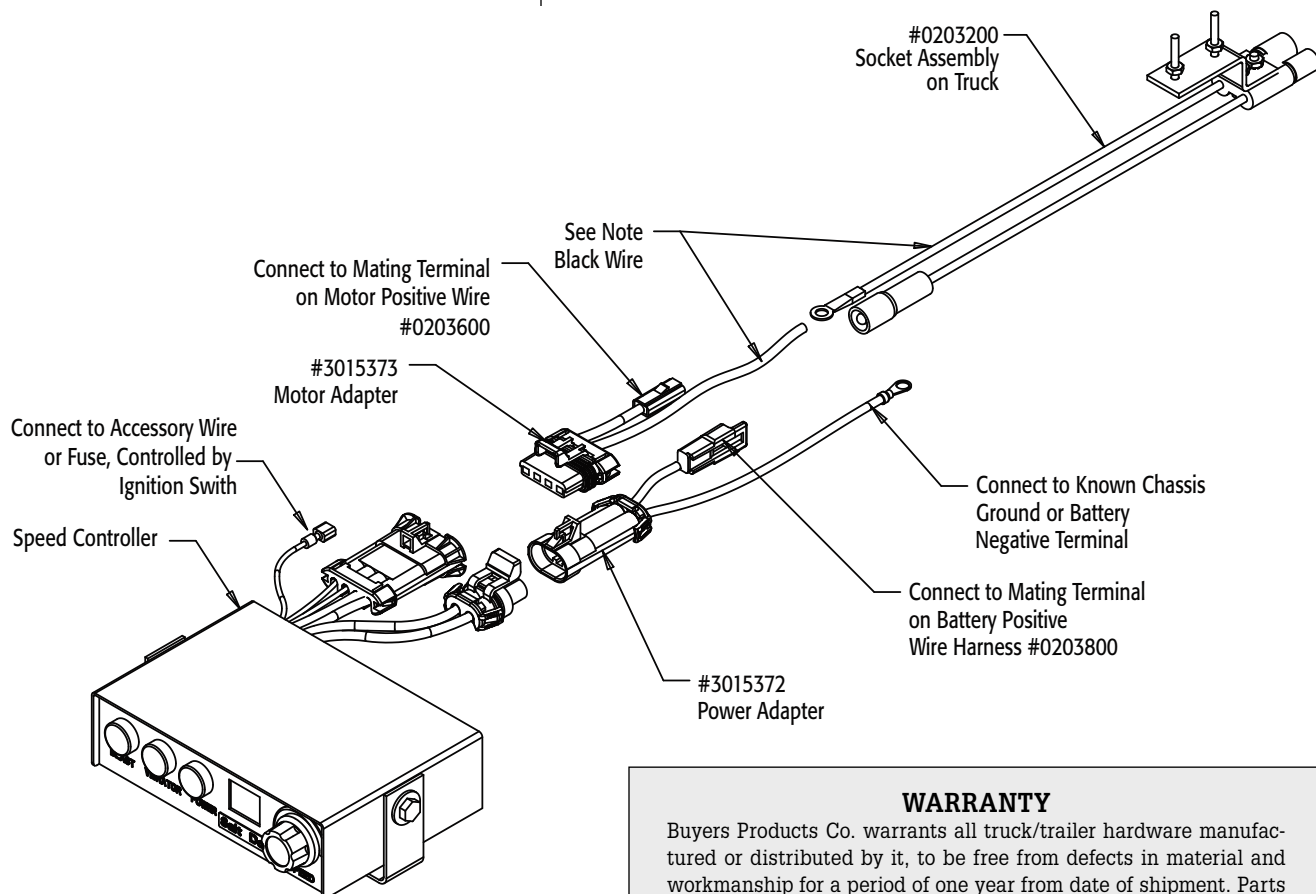

WARRANTY

Buyers Products Co. warrants all truck/trailer hardware manufactured or distributed by it, to be free from defects in material and workmanship for a period of one year from date of shipment. Parts must be properly installed and used under normal conditions. Any product which has been altered, including modification, misuse, accident or lack of maintenance will not be considered under warranty. Normal wear is excluded. The sole responsibility of Buyers Products Co. under this warranty is limited to repairing or replacing any part or parts which are returned, prepaid, and are found to be defective by Buyers Products Co. Authorization from Buyers Products Co. must be obtained before returning any part. No charges for transportation or labor performed on Buyers' products will be allowed under this warranty.